

190 Heavy three-rail sliding door Installation Instruction

Installation tools and accessories



Hexagonal tools



Power drill



Laser level




Plastic stopper




Expansion anchor bolt


Horizontal measurement

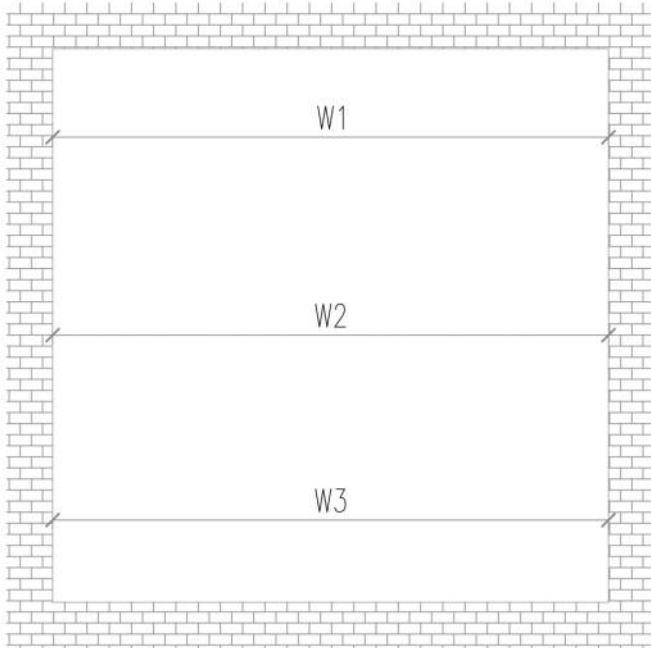

Measure 3 points horizontally



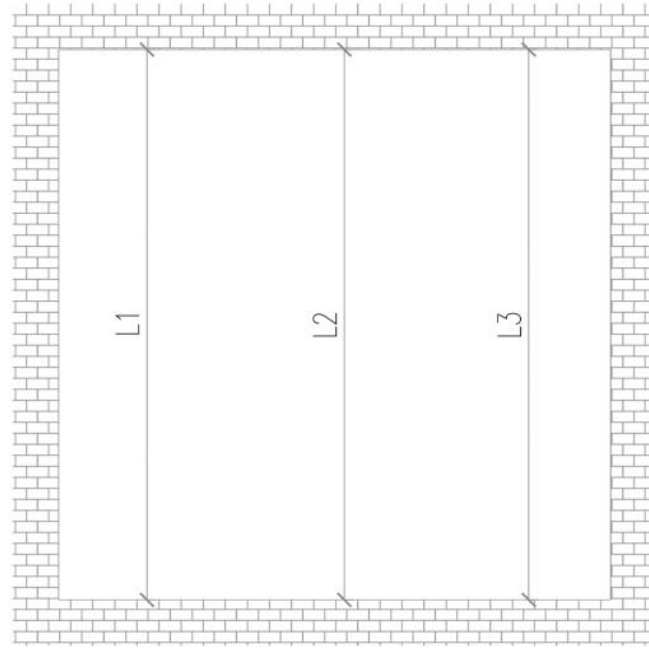


Measure 3 points vertically

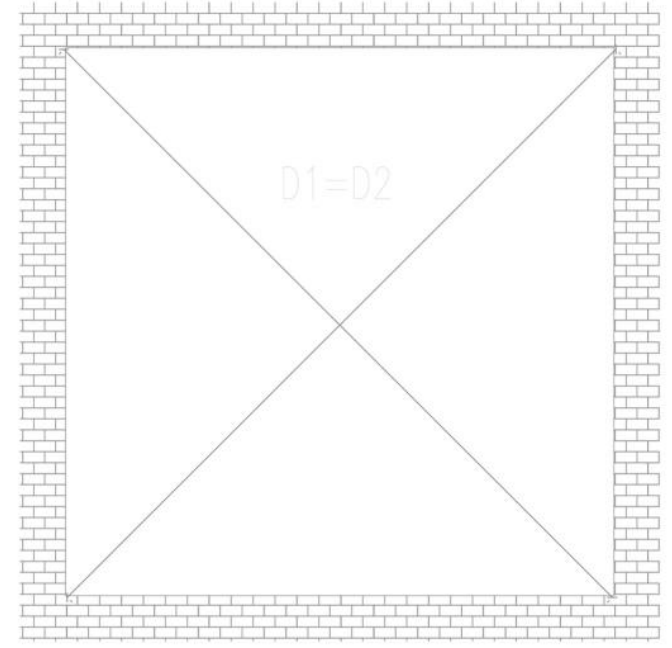


Cross measure the diagonal points


Node Drawing

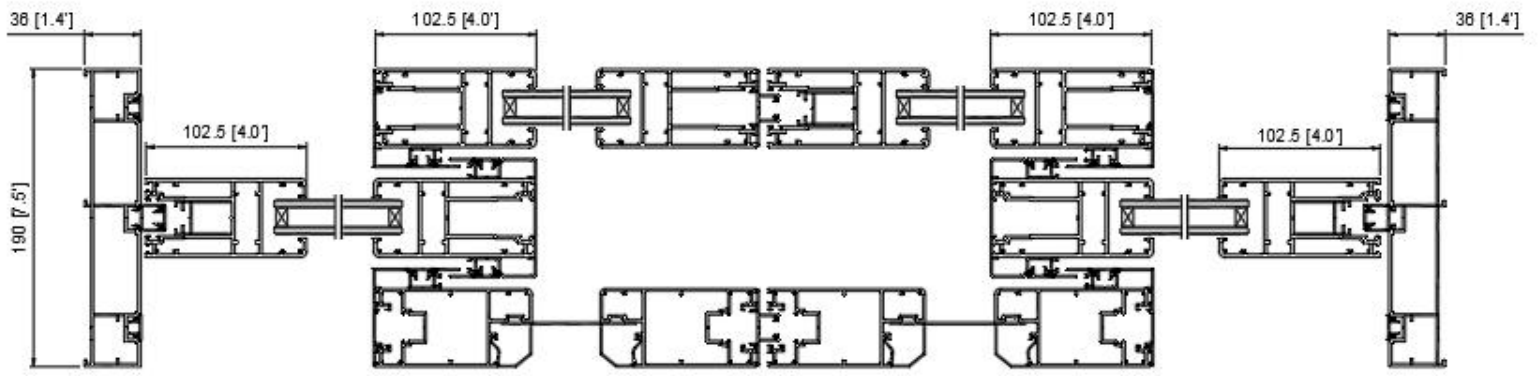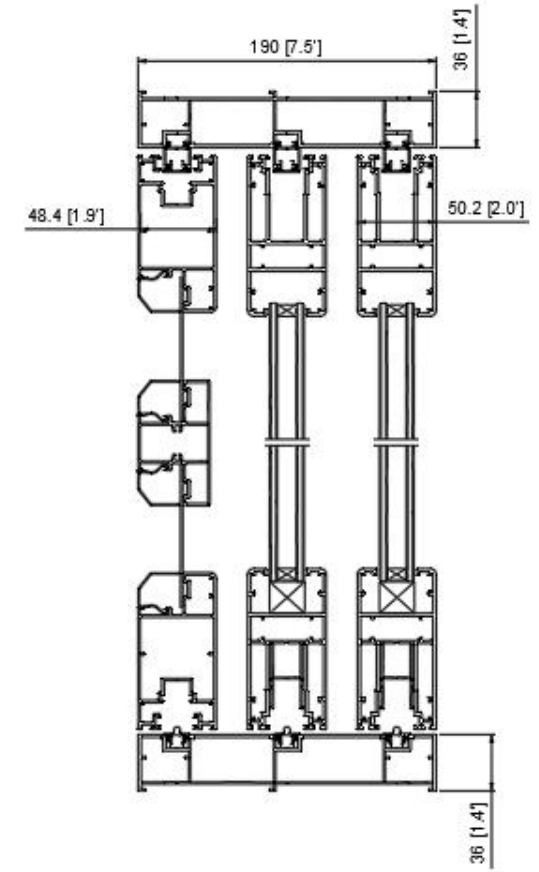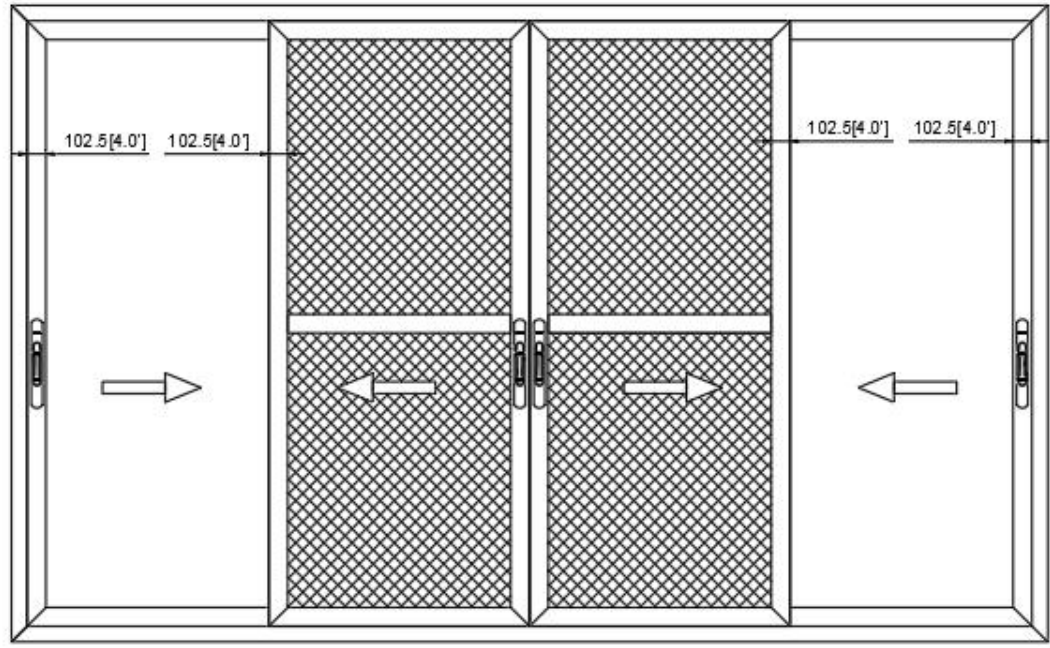

Install the outer frame first

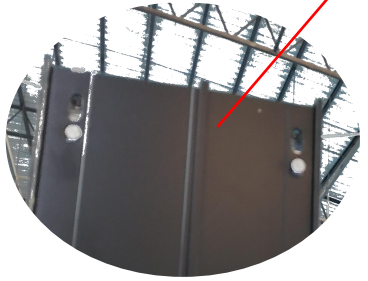


After the 4 corner codes are installed

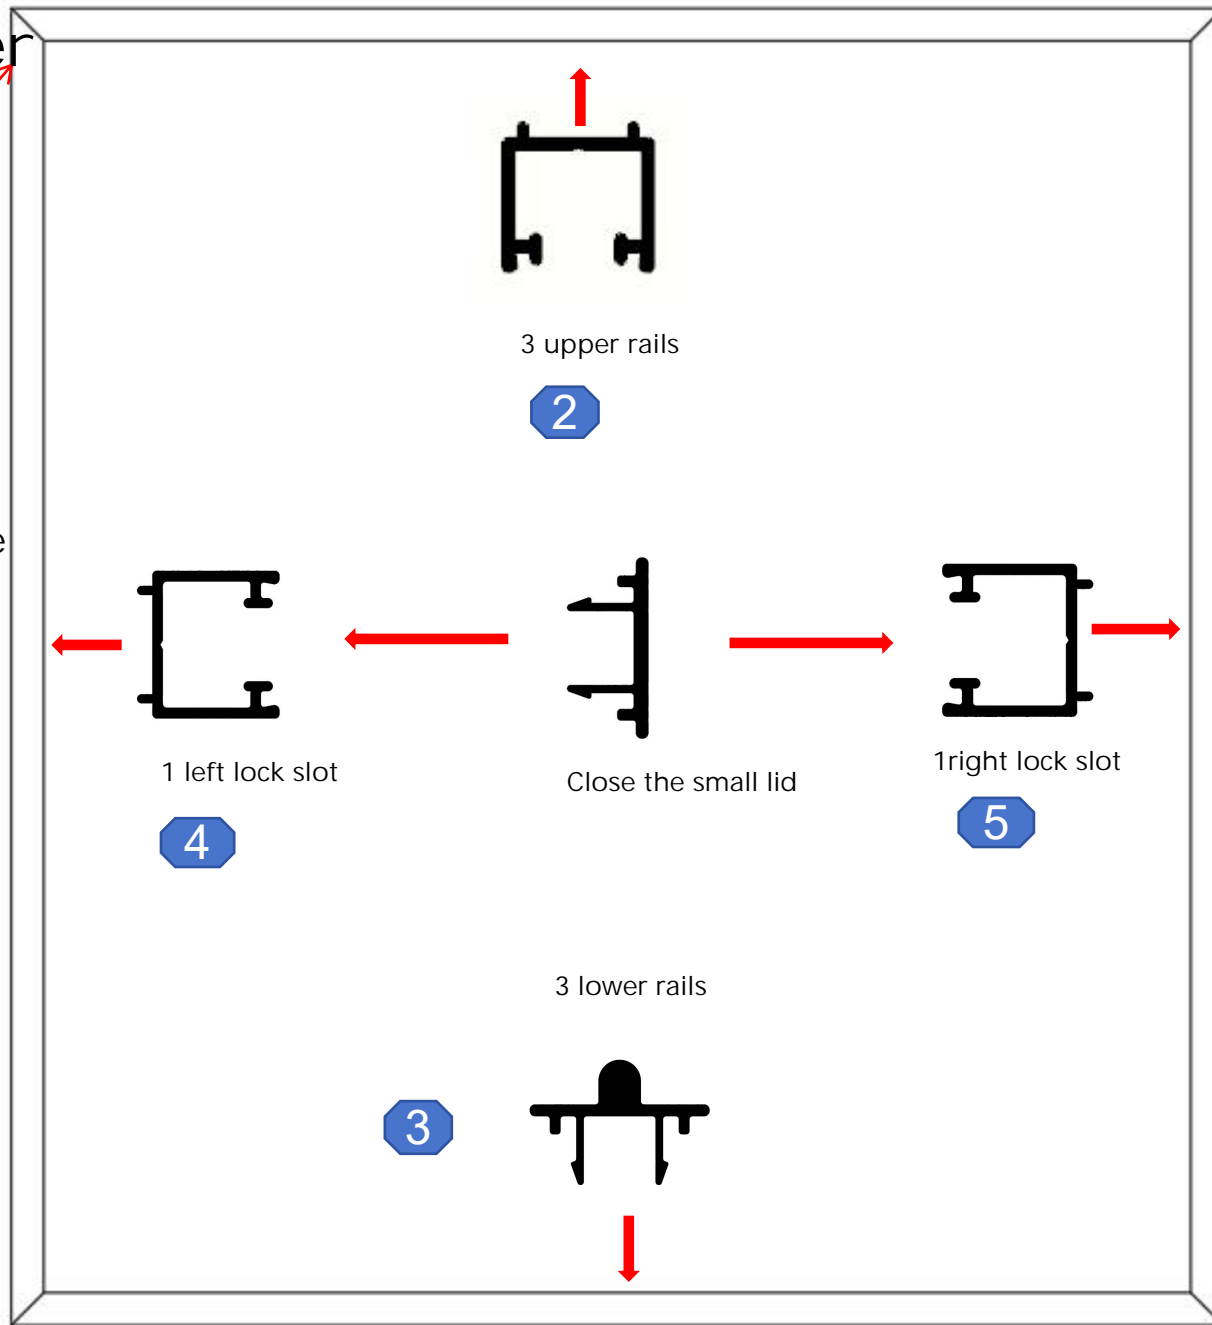


outer door frame

1 mounting angle code


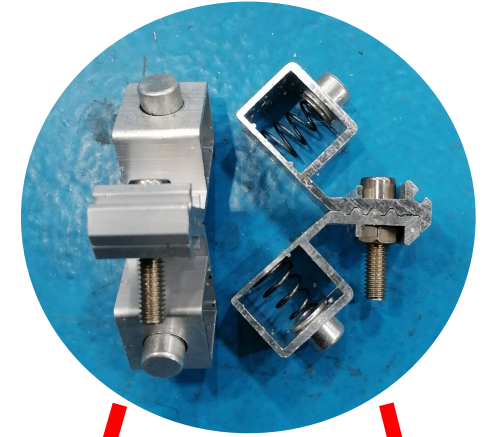


frame corner code



Outer frame profile section

Frame mounting

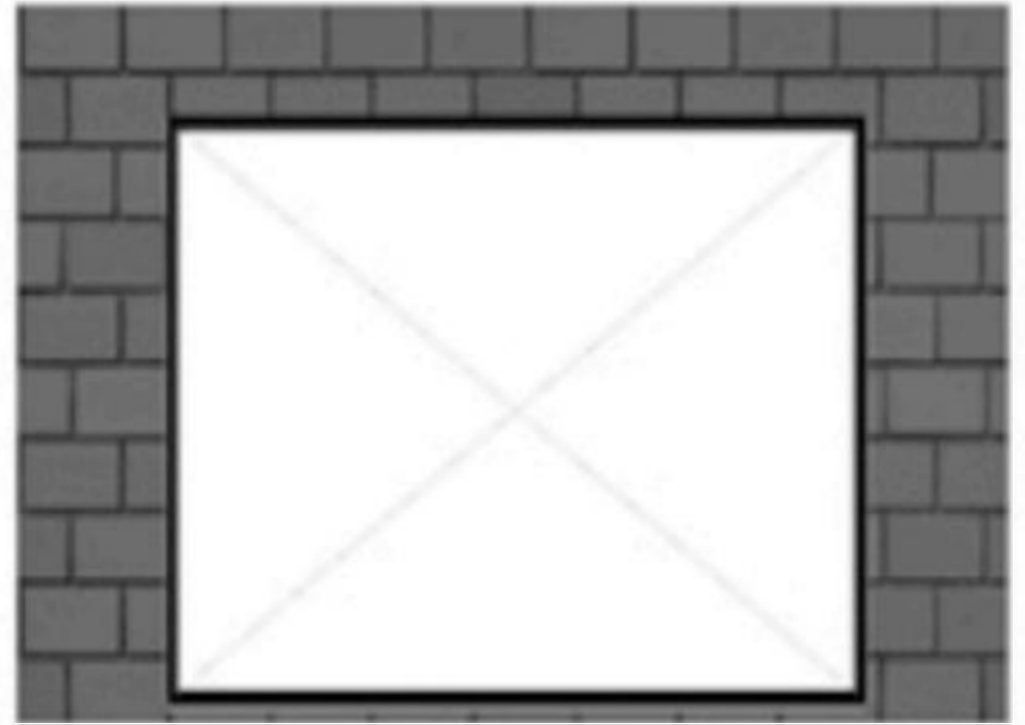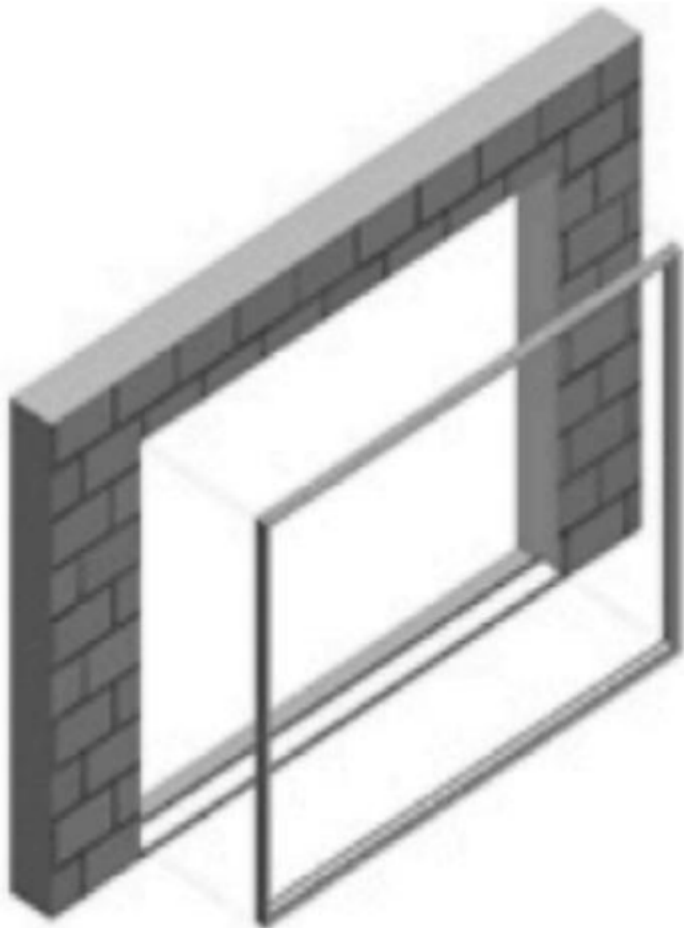

Install the door panel 1




3 Right against the notch bit pressure Insert adhesive strip



Insert the top strip at the side notch

2


corner code for all 4 corners

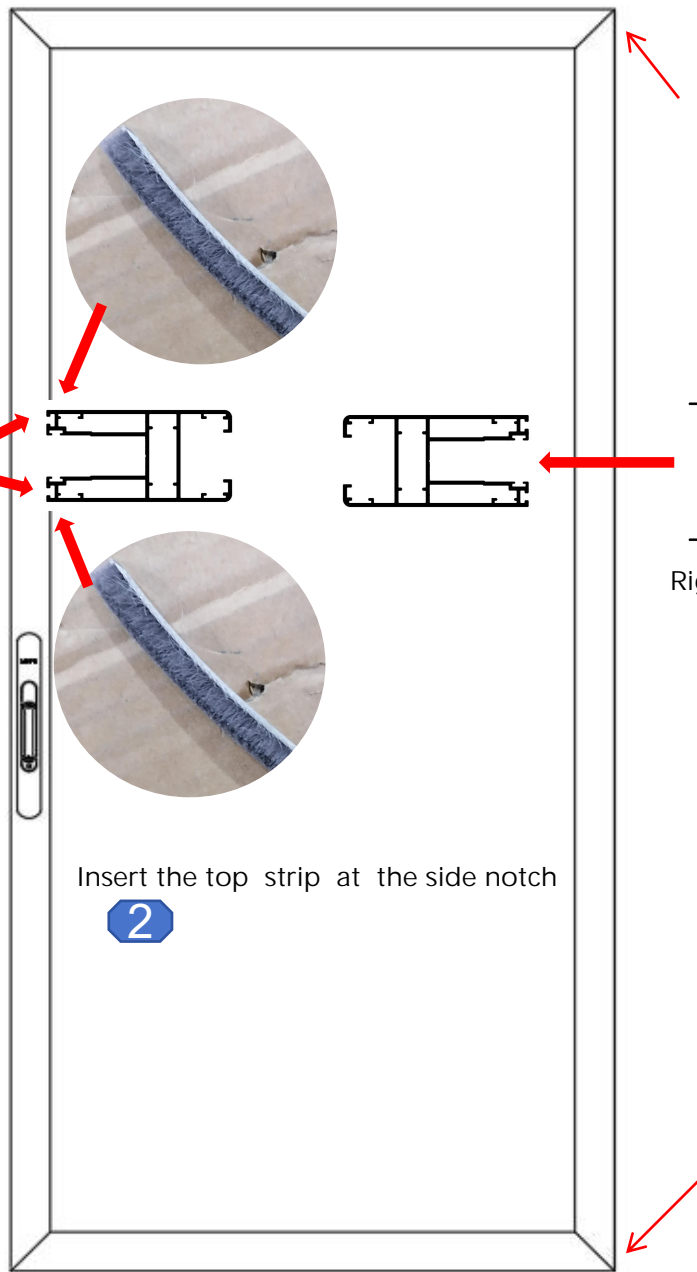


center glass panel

1

insert corner code , corner code seat , insert glass

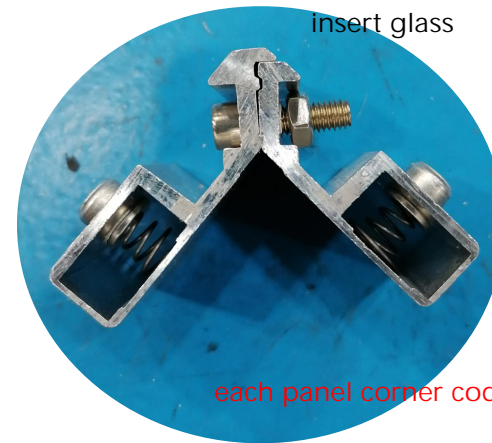


each panel corner code

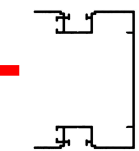



Right side with a double hook

4

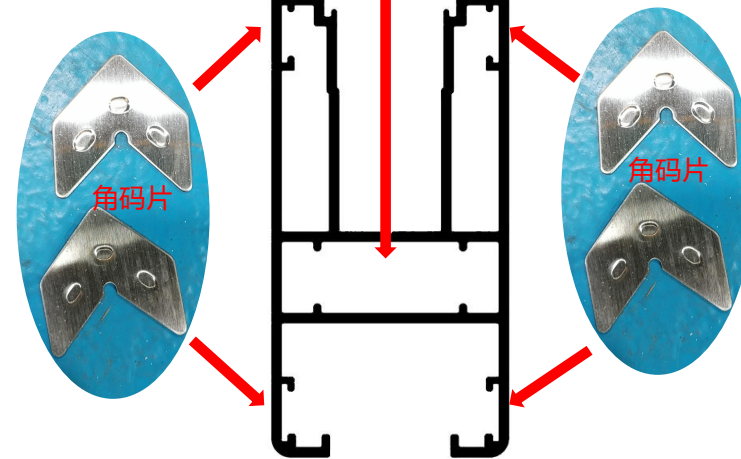


Section diagram of door panel

Install door panels 2

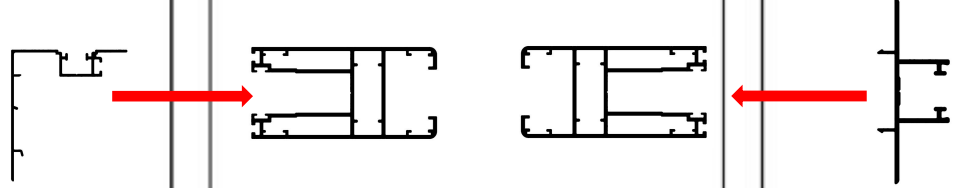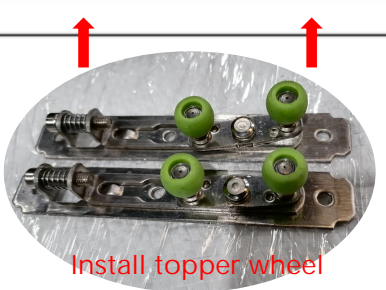


attached a single hood to the left

install the closing material ,do not install the touching panel

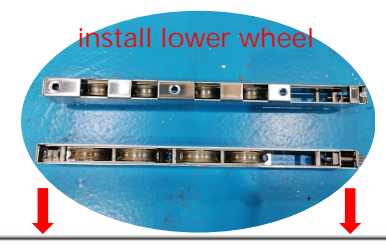

two side panels

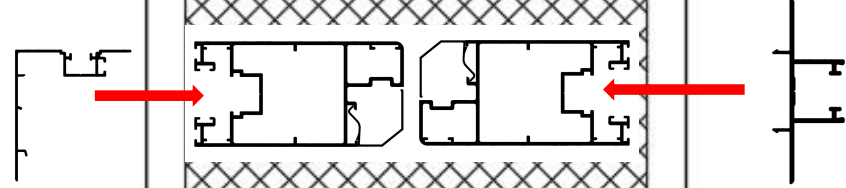


attached single hook to the left

install the closing material ,do not install the touching panel




fly screen panel

Install hardware

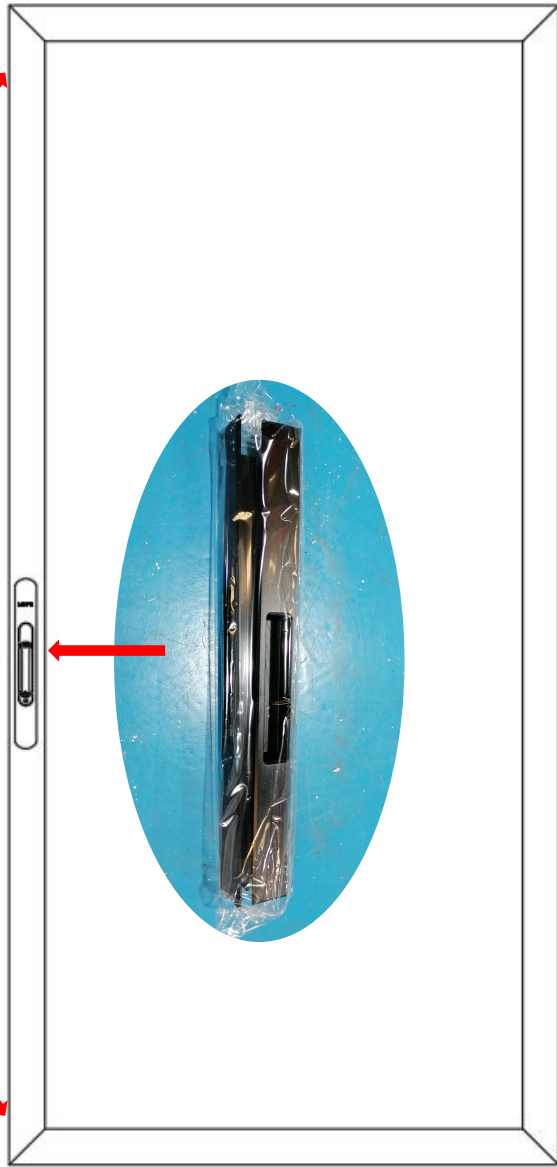

Door panel (including fly screen panel) hardware

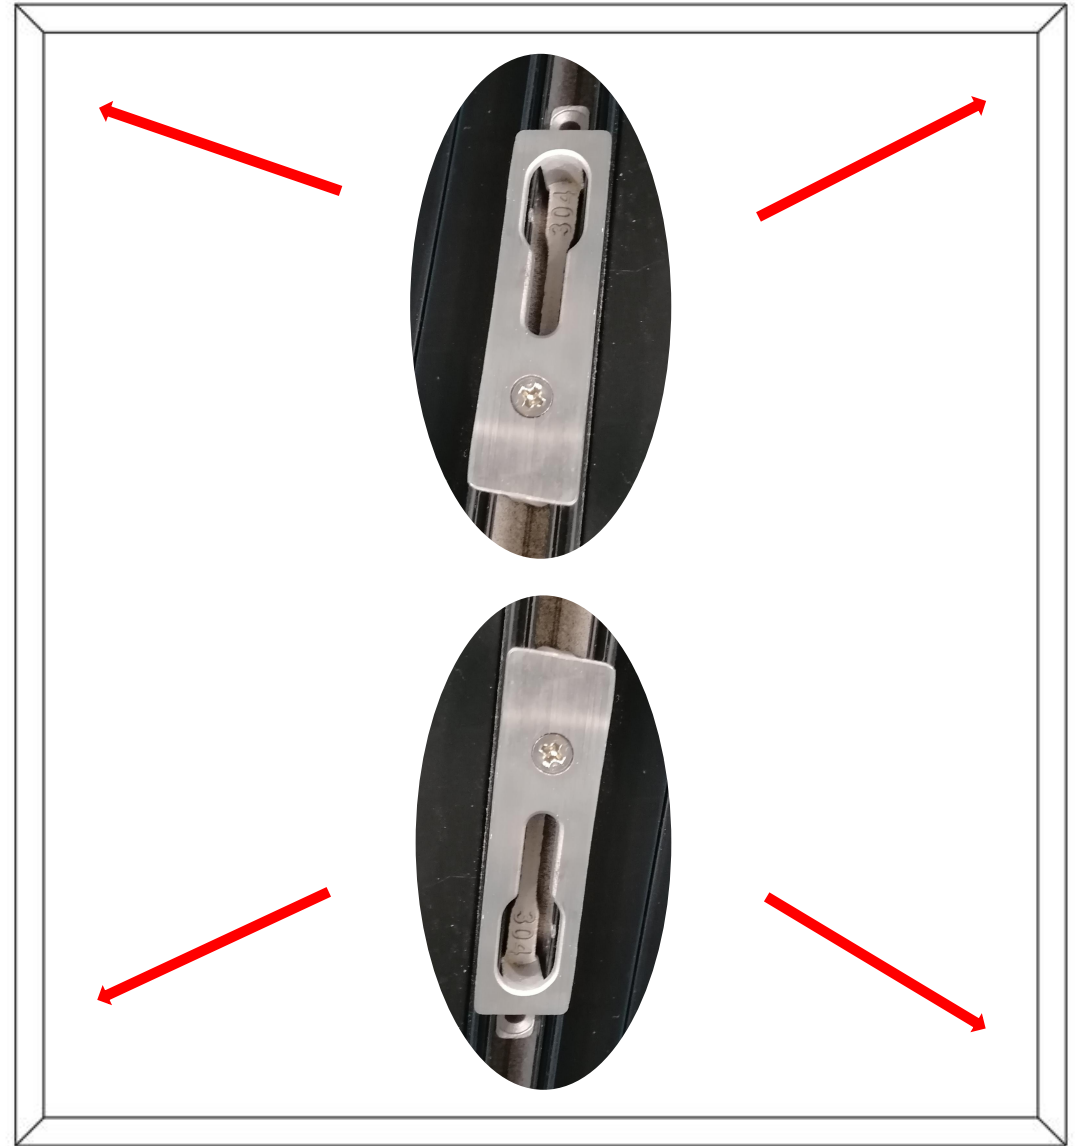

Door Frame hardware

Finished outlook

